

1.2 How to receive the programs?

Scan the satellites to receive the programs.

1.2.1 Satellite configuration

Satellite configuration and manager is in Main Menu->Setup->Installation->MYDISH menu.

Firstly, select the proper switcher according to the switcher you have, as Figure 1.

For sample switcher, each branch is connected with a satellite, user can configuration it as Figure 2.



Figure 1. Satellite Installation



Figure 2. Add Satellite

For DiSEqC1.2 motor, user can set limit position, user location and LNB of it, as then user can adjust and store max 32 position for different satellites, as Figure 3, Figure 4.

Switch Type: select DiSEqC1.0/1.2 switcher or DiSEqC1.2 motor, or select none if you don't have any DiSEqC device.

Toneburst: enable or disable toneburst switcher.

move down to the satellite selection area, and press OK key to add the proper satellite, as Figure 2.

LNB Type: select the LNB type according to your dish.

LNB Low Freq: set the low frequency of LNB.

LNB High Freq: set the high frequency of LNB if it is universal.